



# EXPLODED VIEW DRAWING / PARTS LIST

- |                             |                              |
|-----------------------------|------------------------------|
| 1 Barrel                    | 28 Recoil Spring Lever       |
| 2 Front Sight               | 29 Recoil Spring Lever Pin   |
| 3 Barrel Extension          | 30 Trigger                   |
| 4 Ejector                   | 31 Trigger Spring            |
| 5 Sear Bar                  | 32 Trigger Side Plate        |
| 6 Sear Bar Plunger          | 34 Trigger Lever             |
| 7 Sear Bar Plunger Spring   | 35 Trigger Lever Pin         |
| 8 Sear Bar Plunger Pin      | 36 Hold Open Latch           |
| 9 Sear Bar Spring           | 37 Hold Open Latch Spring    |
| 10 Rear Toggle Link Pin     | 38 Locking Bolt              |
| 11 Breachblock              | 39 Locking Bolt Spring - N/A |
| 12 Firing Pin               | 40 Magazine Release          |
| 13 Firing Pin Spring        | 41 Magazine Release Spring   |
| 14 Firing Pin Spring Guide  | 42 Safety Lever              |
| 15 Extractor                | 43 Safety Lever Pin          |
| 16 Extractor Spring         | 44 Safety Bar                |
| 17 Extractor Pin            | 45 Grip Screws (2)           |
| 18 Front Toggle Link        | 46 Left Grip                 |
| 19 Front Toggle Pin         | 47 Right Grip                |
| 20 Rear Toggle Link         | 48 Magazine Body             |
| 21 Rear Toggle Pin          | 49 Magazine Spring           |
| 22 Rear Toggle Pin Retainer | 50 Magazine Follower         |
| 23 Coupling Link            | 51 Magazine Follower Button  |
| 24 Coupling Link Pin        | 52 Magazine Bottom           |
| 25 Frame (Not Sold)         | 53 Magazine Bottom Pin       |
| 26 Recoil Spring            |                              |
| 27 Recoil Spring Guide      |                              |

You may write or call for parts and service.

AIMCO, INC.  
5123 GULFTON  
HOUSTON, TEXAS 77061  
(713) 661-2301

